

Silent Drawer System

Modul Box Assembly Instruction

Special Features:

- Length:270,300,350,400,450,500,550mm.
- The drawer side-board is 120mm high.
- Drawer width can be designed freely with automatic error adjustment.
- Hidden full pullout silencing sliding skid can bear 40kg and enjoys excellent stability and quite and smooth sliding performance.
- Quick installation and dismantle.
- Newly-designed built-in damper is free from reinstallation and ensures soft and smooth drawer movements.



Basic length	Internally usable drawer depth	Minimum installation depth of drawer	Minimum installation height
270mm	242mm	275mm	142mm
300mm	272mm	305mm	142mm
350mm	322mm	355mm	142mm
400mm	372mm	405mm	142mm
450mm	422mm	455mm	142mm
500mm	472mm	505mm	142mm
550mm	522mm	555mm	142mm

1. Guide Left/Right Length : 270mm
300mm
350mm
400mm
450mm
500mm
550mm


2. Drawer Side & Decorative Cap Left/Right Length: 270mm
300mm
350mm
400mm
450mm
500mm
550mm

3. Back connector Left / Right

4. Front connector Left / Right

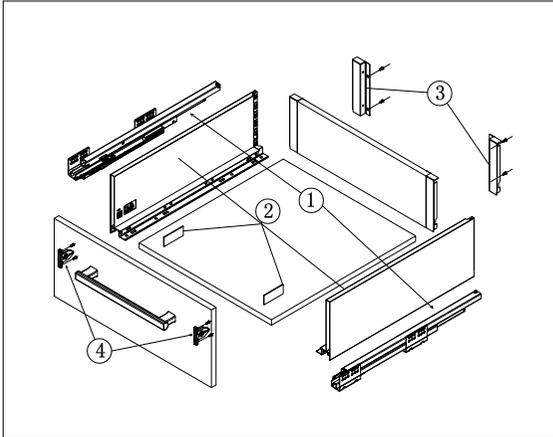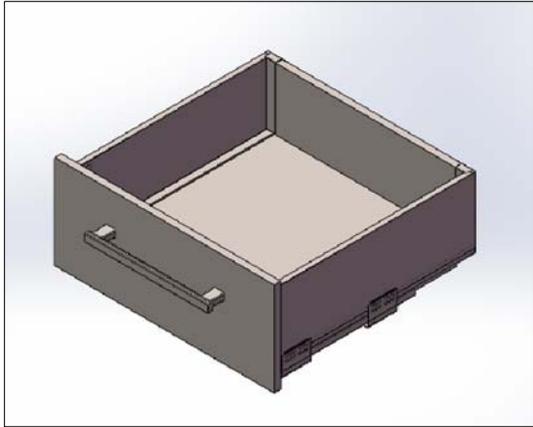


Technology pivot:
Bottom and Back Panel Measurement
18MM Density Panel

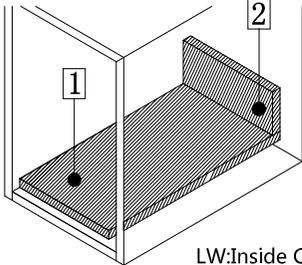

LW:Inside Cabinet Width


- 1 Bottom panel width=Inside Cabinet Width-75±0.5
Bottom panel length=Runner length-10MM
- 2 Back panel height= 100MM
Back panel width=Inside Cabinet Width-87±0.5

Runner Installation(mm)

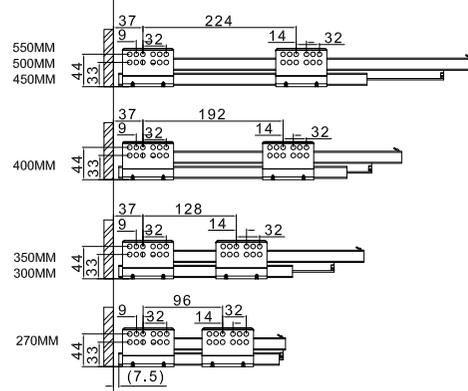


Basic length:270/300/350/400/450/500/550


Inside Cabinet Dimension

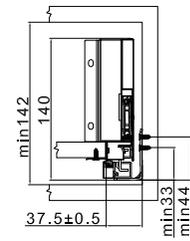


Front fixing brackets mounting

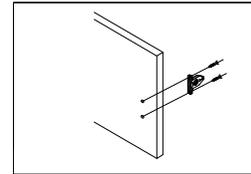


Front panel height adjustment : ±2mm

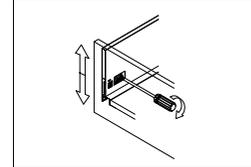


Mounting the drawer

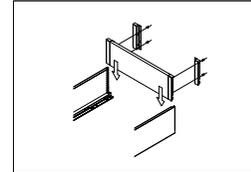



Front Panel Mounting Positions

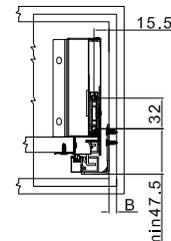


B Side overlay(user-defined)

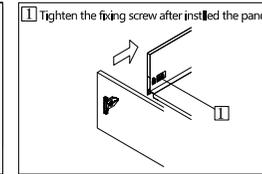

Front panel side adjustment : right1mm

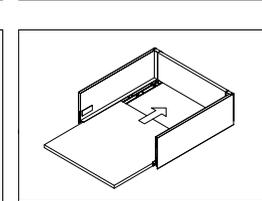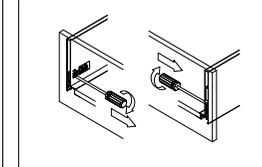


Front Fixing Brackets Positions


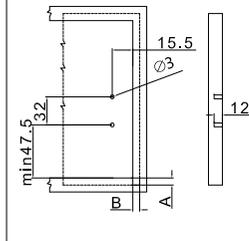


A,B Side overlay(user-defined)


Front panel removing

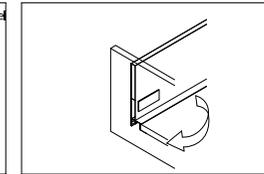


Front panel side adjustment : left1mm

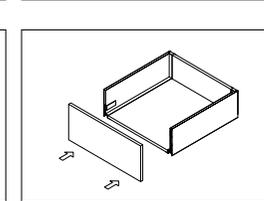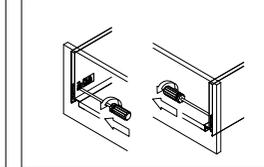


Back Panel Mounting Positions

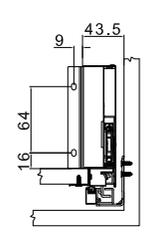


- 1 Loosen the fastening screws
- 2 Rotation to dismantle the panel

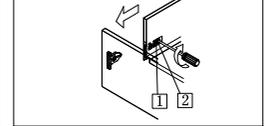






Front panel side adjustment : left1mm

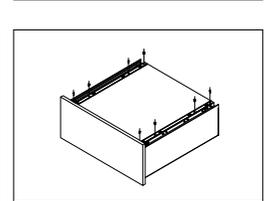


Installing the drawer

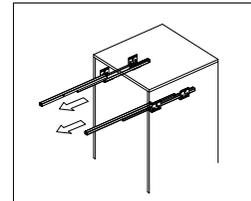

Function of the damper

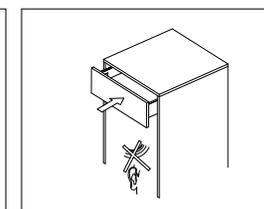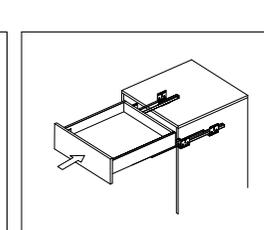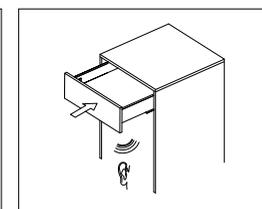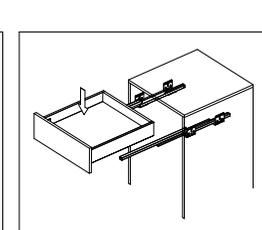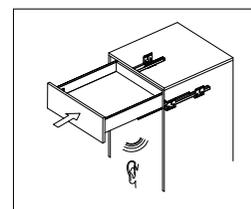

Removing the drawer

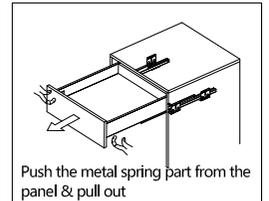

Push the metal spring part from the panel & pull out

